







# **MAGNETIC LOCK**







ALL ELECTRONIC DEVICES ARE ACTIVATED OR DEACTIVATED AUTOMATICALLY WITH A SPECIAL DISEC ID PROXIMITY DEVICE



## **GPS LOCALIZER**



The **GPS LOCALIZER** checks up constantly the position of the vehicle. It creates a virtual boundary around the vehicle and if it moves off this "fence", it sends out an SMS warning with a link to "Google maps", where the coordinates of the van are displayed. It is therefore possible to track down the history of the movements of the vehicle, plus its present location on a smartphone. It also activate a direct line to a relay (Normally Open or Normally Closed).

All the authorized telephones can at any time check for the whereabouts of the vehicle by just sending an SMS; the **GPS LOCALIZER** will answer indicating the position of the vehicle on a map.

#### WHEN THE OWNER IS PRESENT:

The **iD Proximity** device is detected, the protection system is de-activated and a relay line is opened.

It is possible at any time to check on the position of the van via SMS.



#### WHEN THE OWNER IS ABSENT:

It detects if the Van protector is tampered. In case of a violent shock a warning SMS is sent out with a link to "Google maps" and the consequent coordinates of the vehicle on a smartphone.

### WHEN THE OWNER IS PRESENT:

The **iD Proximity** device is detected, the protection system is deactivated and a relay line is opened. Available only for MG850/MG850 S.

Available only if connected to a GPS LOCALIZER, not available as a stand-alone apparatus.

