



1. Preparing the base unit

1.1 Put gasket into right place (3), and make sure the blank side face to glass.

1.2 Dispose the spacer

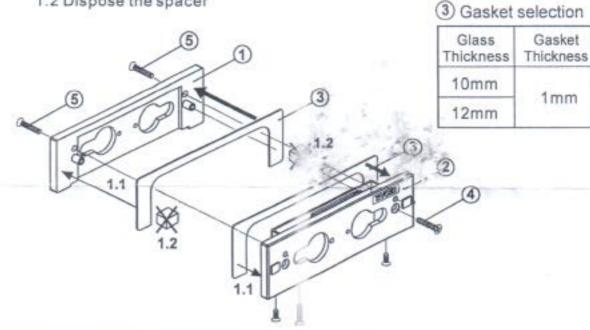

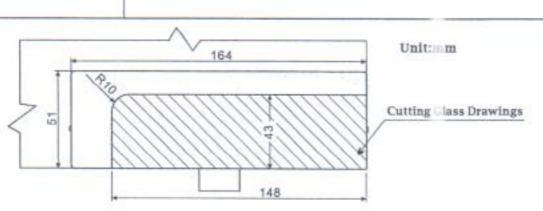


Glass Cutting Dimensions



Cutting Glass Drawings






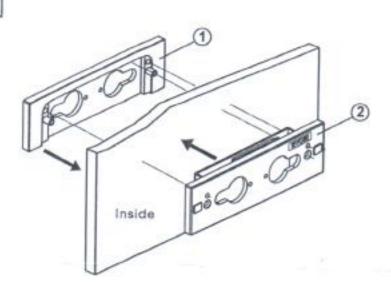


2

Check the set screws again and make sure all the set screws are tight. Tightening torque 8N.m.

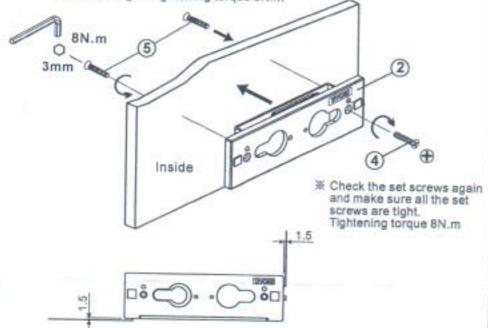

3 Installation of the cover caps.

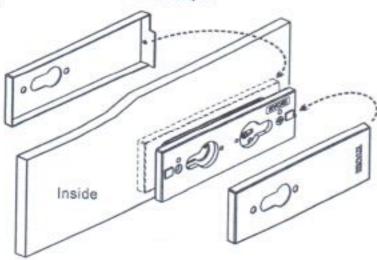

4

