



# MAGNETIC LOCK MOUNTING ACCESSORIES

Electromagnetic locks (maglocks) can be installed on various frames and doors using accessory pieces. To figure out what you need for a maglock install, first measure the door stop. Most maglocks require 2-1/4" to 2-1/2" of flat mounting space for the mounting bracket or direct mount. You may need one or more accessories if the door stop is less than 2-1/2".

Securiton's M38, M68, M32, M380 and M680 Maglocks® fit in 2-1/4" of flat mounting space. Securiton's M62, DM62 and M82 Maglocks fit in 2-1/2" of flat mounting space.

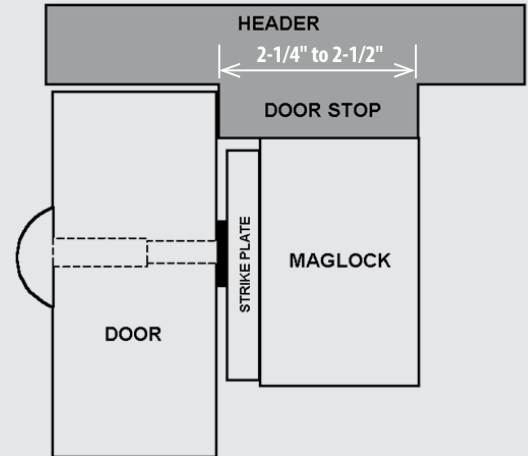


## What maglock accessories does your door need?

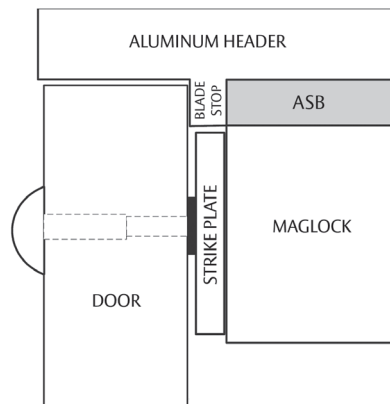


### ALUMINUM SHIM BRACKETS (ASB)

- For aluminum doors
- Used when the blade stop requires the maglock to be lowered
- Available for M32, M62 and M82 only

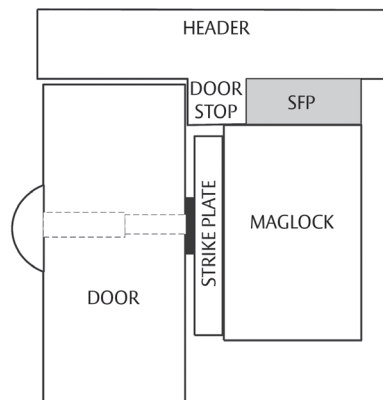

### STOP FILLER PLATES (SFP)

- For steel and wood frames
- Fills or extends a door stop
- Available in 1/4", 3/8", 1/2" and 5/8" thicknesses

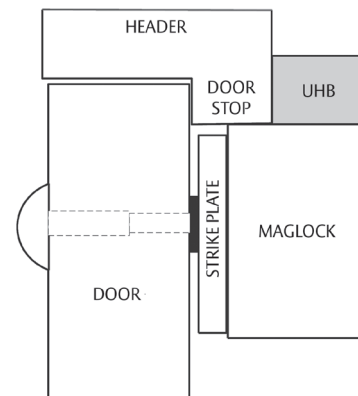


### UNIVERSAL HEADER BRACKET (UHB)


- Extends the header 1" to 1-1/2" to create enough header to mount the magnet
- Provides concealed wiring chamber



# MAGNETIC LOCK MOUNTING ACCESSORIES

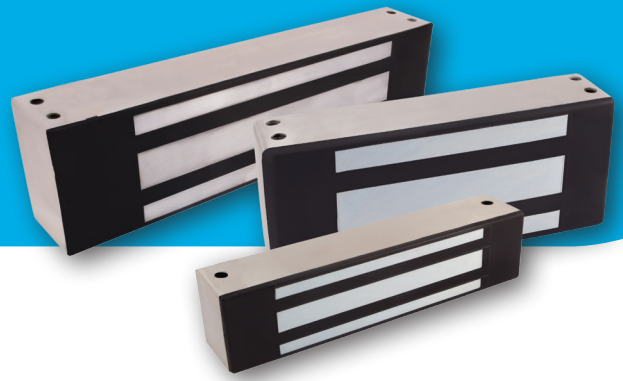


## What maglock accessories does your door need? *(continued)*

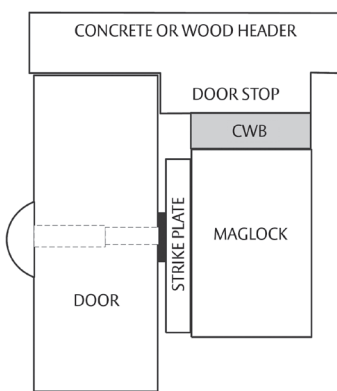


### CONCRETE/ WOOD BRACKET (CWB)

- For concrete filled metal frames and wood frames
- Easier to install than blind nuts
- Heavy duty wood and metal fasteners included
- Available for M32, M62 and M82 only

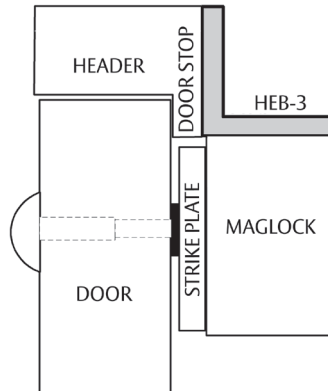


### HEADER EXTENSION BRACKET (HEB)

- 90 degree angle brackets
- Extends narrow headers to permit maglock mounting

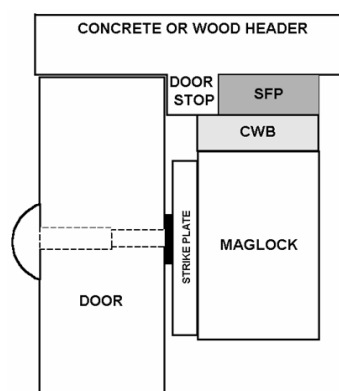


### *Sample Stop Filler Plate (SFP) and Concrete/Wood Bracket (CWB) combination*

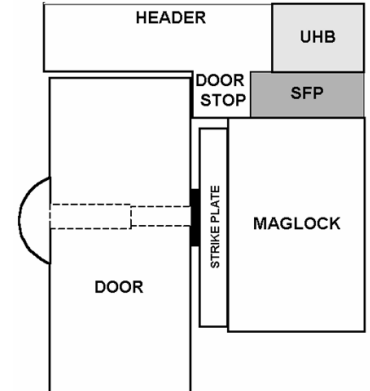

### *Sample Stop Filler Plate (SFP) and Universal Header Bracket (UHB) combination*


*Accessories are available in clear aluminum or black anodized finish. Verify length of magnetic lock before ordering mounting accessories.*

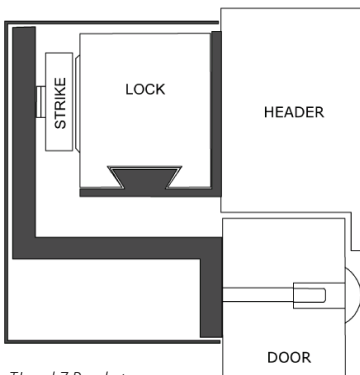

*TJ and Z Brackets*

### Z BRACKETS AND TOP JAMB (TJ) BRACKETS

- Use on in-swing doors
- Use Z bracket with face mount maglocks
- Use Top Jamb bracket with bracket mounted maglocks
- Dress covers in clear anodized, black anodized or satin stainless

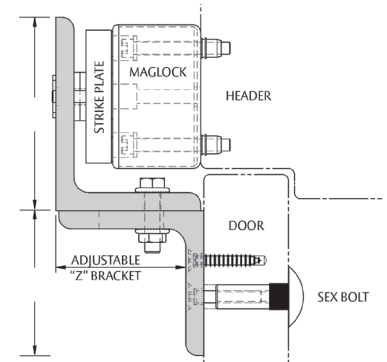

SMC-051-0414