

AY-x25B Series

MIFARE Classic® EV1 CSN Readers Installation Manual

1. Introduction

The AY-x25B is a series of RFID proximity card readers to be installed for use with access control systems.

The AY-x25B series reads the card serial number (CSN) from MIFARE Classic® EV1 credentials (4 UID and 7 UID) and transmits its data to the access control system using Wiegand 26-Bit output.

Other Wiegand formats and the Clock & Data format are available as factory configurable options.

Figure 1: AY-x25B Series



2. Technical Specifications

2.1 Electrical Characteristics

Specifications	AY-M25B	AY-H25B	AY-L25B	AY-K25B
Power Supply Type	Linear (recommended)			
Operating Voltage Range	5–16 VDC			
Absolute Maximum (non-operating)	18 VDC			
Current @ 12V	Standby: 45 mA Maximum: 100 mA			
Max. Read Range*	6.5 cm (2.6 in.)	7.0 cm (2.8 in.)		6.0 cm (2.4 in.)
LED Control Input	Dry Contact, N.O.			
Tamper Output	Open collector, active low, max. sink current 16 mA			
Maximum Cable Distance to Controller	18-AWG: 150 m (500 ft) 20-AWG: 90 m (300 ft)			
Frequency	13.56 MHz			
Bit Rate	106 KHz			

* Measured using a Rosslare MIFARE Classic EV1 card or equivalent. Range also depends on installation environment, reader voltage, and proximity to metal.

2.2 Environmental Characteristics

Specifications	AY-M25B	AY-H25B	AY-L25B	AY-K25B
Operating Temp. Range	-31°C to 63°C (-25°F to 145°F)			
Operating Humidity Range	0 to 95% (non-condensing)			

2.3 Physical Characteristics

Model	Dimensions (H x W x D)	Weight
AY-M25B	89 x 89 x 15 mm (3.5 x 3.5 x 0.6 in.)	109.1 g (3.8 oz.)
AY-H25B	110 x 75 x 15 mm (4.3 x 3.0 x 0.6 in.)	116.9 g (4.1 oz)
AY-L25B	145 x 43 x 20 mm (5.7 x 1.7 x 0.8 in.)	111.1 g (3.9 oz)
AY-K25B	80 x 40 x 12.8 mm (3.2 x 1.6 x 0.5 in.)	68.5 g (2.4 oz)

3. Installation



Installation of an RFID reader adjacent to metallic surfaces might alter the reader's specifications. To diminish this interference, use a plastic spacer when mounting the reader.

3.1 Installation Kit

The installation kit consists of the following items to be used during the installation procedure:

- One self-adhesive mounting label template
- Two pan head mounting screws and screw anchors
- One Torx key tool
- One Torx security screw

3.2 Mounting


Before mounting, you should determine the best location for the reader.

To mount the reader:

1. Peel off the back of the self-adhesive mounting label template and place it at the required mounting location.
2. Using the template as a guide, drill two holes (hole size and position is indicated on the mounting template) for mounting the reader onto the surface.
3. Insert a screw anchor into each hole.
4. Drill a 10-mm (7/16") hole for the cable. If mounting on metal, place a grommet or electrical tape around the edge of the hole.
5. Remove the screw from the bottom of the unit.

6. Remove the reader's snap-off front cover.
7. Insert the unit's cable wire into the cable hole and wire the unit as described in Section 3.3. A linear type power supply is recommended.
8. Align the two holes of the reader with those drilled in the wall and firmly attach the reader to the wall with two screws (Figure 2).

Figure 2: Inserting Mounting Screws

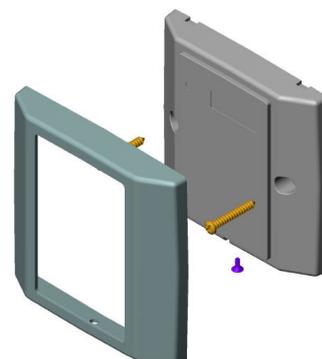

9. Relocate the front cover onto the reader.
10. Secure the front cover by using the supplied security Torx screw. A Torx security screw tool is provided to tighten the security Torx screw.

3.3 Wiring

The AY-x25B is supplied with a 6-conductor 56-cm (22-in.) pigtail with exposed wires coated with solder.

To connect the reader to the controller:

1. Select the appropriate connections according to Table 1.

Table 1: Wiring

Wire Color	Function
Red	VIN 5–16 VDC
Black	Shield / Ground
Green	Data 0 / Data
White	Data 1 / Clock
Brown	Green LED CTL
Purple	Tamper Output

2. Prepare the controller cable by cutting its jacket back 3 cm (1¼") and strip the insulation from the wires about 1.2 cm (½").
3. Splice the reader's pigtail wires to the corresponding controller wires and cover each joint with insulating tape.
4. If the tamper output is being utilized, connect the purple wire to the correct input on the controller.
5. Trim and cover all unused conductors.



Note

- When using a separate power supply for the reader, this supply and that of the controller must have a common ground.
- The reader's cable shield wire should be preferably attached to an earth ground, or a signal ground connection at the panel, or power supply end of the cable. This configuration is best for shielding the reader cable from external interference.

3.4 Operation Instructions

Once the reader is wired to a power supply and to the controller, you should test the reader.

To test the reader:

1. Power up the reader.
Upon power up, the reader flashes and beeps once during Self-Test. The LED then turns red indicating the readers has entered Standby mode.
2. Apply a MIFARE Classic EV1 credential to the reader.
The reader flashes and beeps once indicating the card has been read successfully.

Declaration of Conformity

FCC ID = GCD-AYX25B

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

The full ROSSLARE Limited Warranty Statement is available in the Quick Links section on the ROSSLARE website at www.rosslaresecurity.com.

Rosslare considers any use of this product as agreement to the Warranty Terms even if you do not review them.

Contact Information

United States and Canada

Rosslare Security Products, Inc.
Southlake, TX, USA
Toll Free: +1-866-632-1101
Local: +1-817-305-0006
Fax: +1-817-305-0069
support.na@rosslaresecurity.com

Europe

Rosslare Israel Ltd.
22 Ha'Melacha St., P.O.B. 11407
Rosh HaAyin, Israel
Tel: +972-3-938-6838
Fax: +972-3-938-6830
support.eu@rosslaresecurity.com

China

Rosslare Electronics (Shenzhen) Ltd.
Shenzhen, China
Tel: +86-755-8610-6842
Fax: +86-755-8610-6101
support.cn@rosslaresecurity.com

Asia Pacific, Middle East, Africa

Rosslare Enterprises Ltd.
Kowloon Bay, Hong Kong
Tel: +852-2795-5630
Fax: +852-2795-1508
support.apac@rosslaresecurity.com

Latin America

Rosslare Latin America
Buenos Aires, Argentina
support.la@rosslaresecurity.com

India

Rosslare Electronics India Pvt Ltd.
Tel/Fax: +91-20-40147830
Mobile: +91-9975768824
sales.in@rosslaresecurity.com



• EN ISO 13485

